

Equipment suitable for people with a hearing loss

All products are available from Hearing Products International



# Alerters for Carers

Available for demonstration in the CamTAD Resource Centre

Please call 01332 258143 for an appointment

**Version 3 – prices correct from 01/03/2020**



## **Echochime 300 wireless doorbell**

**£61.20 inc VAT and P&P**

A bright, flashing strobe light makes the EchoChime 300 perfect to help with any type of hearing loss. There's also a choice of 18 different melodies and a volume control dial, so you can find just the right sound for you. The maximum volume for the audible alerts is suitable for those with up to a severe hearing loss. There are a range of additional alerts available including an additional bell push for the back door, telephone alerter and sound sensor.

## **Echo Bed Pad & Transmitter**

£117.60 inc VAT and P&P

£98.00 exc VAT inc P&P

## **Echo Chair Pad & Transmitter**

£87.60 inc VAT and P&P

£73.00 exc VAT inc P&P



**These product are VAT exempt  
if you are Deaf or have a hearing loss**

The New Echo® Pads and Transmitters are a bed/chair leaving alarm that sends a signal to the EchoChime300™ receiver (or Echo® Vibrating Pager™) to alert a carer or spouse that a patient or user has risen from the bed or their chair. The alert will automatically reset with return to the bed pad.

It can be difficult for carers to monitor patients; they could fall out of bed, off their chair or, if suffering from dementia, may be prone to wandering off. Alternatively the patient may need a call button to request assistance during the night.

The Bed/Chair Pad plugs easily into a Sensor Pad Transmitter (or call button), which is in turn paired with the chime receiver or vibrating pager. The alert time can be selected to activate either:

- Immediately
- after 3 seconds or
- after 10 minutes

The pad sits under the bed sheet or the seat cushion. When the user lays/sits down, the red LED lights on the transmitter to acknowledge detection, the alarm is set. When the user leaves the bed/chair, a signal is sent from the transmitter to the receiver, the chime receiver will alert if the user rises from the pad and does not return within the selected time. The receiver is alerted with either loud sounding, flashing or vibrating alert which makes it suitable for people who have a hearing or a visual impairment. If the user returns to the pad within 3 seconds or 10 minutes the pad will be reset.

When set to 10 minute alert, this allows the user time to rise from the bed/chair and return within the set time frame without alerting the carer. Settings can be selected in the tamper proof battery compartment and be set independently to the user/ carer requirement



### Window/Door Alarm Transmitter

**£45.00 inc VAT and P&P**

The Magnetic Door/ Window alarm can be easily paired with the flashing chime receiver and/ or the vibrating pager to provide a versatile alerting option. The transmitter and magnet come with double sided pads to fix the magnet to the door/ window and the transmitter to the frame. The magnet is simply aligned next to one of the markers on either side of the transmitter, the unit can be switched on or off as and when alerting is required.

- Cyclical alert if door/ window remains open or transmitter is not switched off transmitter will trigger again
- Loud sound alert from transmitter (sound can be disabled if required)
- Dual sensors allow magnet to be placed on left or right side – dual tone – siren or bell sound
- Low battery indicator on receiver – Powered by two CR2032 batteries (included)

### The following are compatible with this system but not available for demonstration



### PIR (Passive Infra-red) Sensor Transmitter £45.00 inc VAT and P&P

The transmitter will detect movement in the rooms in your home where they are placed. The transmitter will then trigger the EchoChime300™ receiver and/ or the Echo Vibrating Pager™ alerting with a loud sound, flash or vibrate.

This information can be used in a number of ways to monitor appropriate movement around the home:

- To alert the carer to movement through a doorway or in/ out of a room or building.
- To alert a carer to unusually long periods when no movement is detected.
- To prompt a carer or family member to respond immediately.

The movement sensors can be placed on the wall (attachments included) or can be used at floor level to trigger on sensing movement.



### Vibrating Pager Alert and Bell Push

**£58.80 inc VAT and P&P**

**£49.00 exc VAT and P&P**

The complete set includes a vibrating pager and bell push transmitter and comes ready to use.

The bell push transmitter is weather resistant and very easy to mount indoors and outdoors (attachments included). When the bell push is pressed the pager is activated with strong vibration, sound alert and a bright LED. The bell push can be used as a door bell or it can be used by another person to signal to the receiving pager, therefore acting as a person to person pager.

The pager has a strong vibration enabling it to be used in the pocket, on the belt, or in the pillow. The bright LEDs and the visual picture icons indicate the source of the activation. In this set the bell push is paired with the first door icon.